

Shark[™] Trailblazer

Upright Vacuum

Item # XSG825

for Model EP825

 
10 Paper Bags – 2 Belts – 1 Bulb



Warning: To reduce the risk of electric shock, the power cord must be disconnected before changing the bag or performing maintenance/trouble shooting checks.

Changing the Dust Bag:

- A) Unplug power cord from wall outlet.
- B) Remove the front panel of the unit.
- C) Remove the old dust bag by holding the cardboard tab and pull towards you. Remove carefully to avoid dust/dirt spilling from dust bag.
- D) Take a new dust bag and while holding the cardboard tab push the bag over the opening of the dirt discharge tube until it is seated against the rear of the enclosure.
- E) Make sure that the entire bag is inside the housing, before replacing the front panel. Always check the pre-motor and post motor filters every time you change the dust bag.
- F) Once the new dust bag is in place, replace the front panel by aligning the bottom locking tabs with the slots in the body, close cover slowly allowing the front panel to snap in place. The latch will self lock.

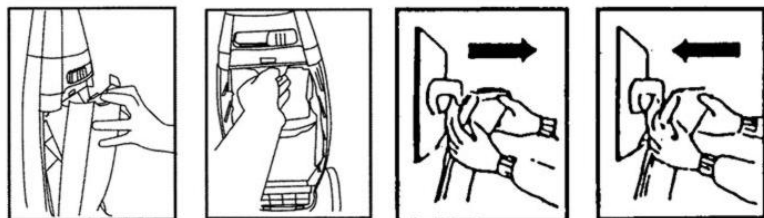

NEVER REUSE PAPER BAGS

For information or assistance, call 1-866-98SHARK (1-866-987-4275)
USA: **EURO-PRO Operating LLC**
21 Lawrence Paquette Industrial Drive
Champlain, NY 12919
Canada: **EURO-PRO Operating LLC**
4400 Bois Franc
St. Laurent, QC H4S 1A7
or visit our website: www.sharkvac.com

EURO-PRO

Rev.12/03
Printed in China

Shark[™] Trailblazer

Upright Vacuum

Item # XSG825

for Model EP825

 
10 Paper Bags – 2 Belts – 1 Bulb



Warning: To reduce the risk of electric shock, the power cord must be disconnected before changing the bag or performing maintenance/trouble shooting checks.

Changing the Dust Bag:

- A) Unplug power cord from wall outlet.
- B) Remove the front panel of the unit.
- C) Remove the old dust bag by holding the cardboard tab and pull towards you. Remove carefully to avoid dust/dirt spilling from dust bag.
- D) Take a new dust bag and while holding the cardboard tab push the bag over the opening of the dirt discharge tube until it is seated against the rear of the enclosure.
- E) Make sure that the entire bag is inside the housing, before replacing the front panel. Always check the pre-motor and post motor filters every time you change the dust bag.
- F) Once the new dust bag is in place, replace the front panel by aligning the bottom locking tabs with the slots in the body, close cover slowly allowing the front panel to snap in place. The latch will self lock.

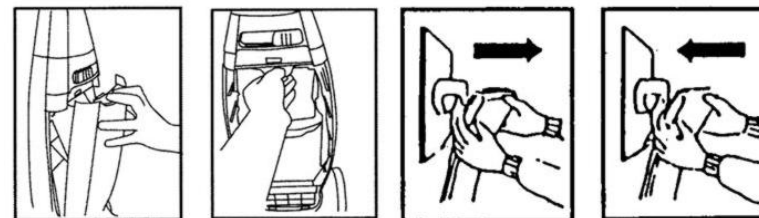

NEVER REUSE PAPER BAGS

For information or assistance, call 1-866-98SHARK (1-866-987-4275)
USA: **EURO-PRO Operating LLC**
21 Lawrence Paquette Industrial Drive
Champlain, NY 12919
Canada: **EURO-PRO Operating LLC**
4400 Bois Franc
St. Laurent, QC H4S 1A7
or visit our website: www.sharkvac.com

EURO-PRO

Rev.12/03
Printed in China



Warning: Always disconnect from power source when servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from cleaner suddenly starting.

Changing the Power Nozzle

Belt:

- Occasionally the power nozzle drive belt will require changing, the frequency will depend upon the amount of use your vacuum sees.
- Turn unit "Off" and unplug from wall outlet.
- Use a Phillips screwdriver and remove the two screws from the back of the motorized power head cover. (Fig. 1)
- Remove the two screws from the bottom of the motorized power head. (Fig. 2)
- If the belt has broken, remove any loose pieces before replacing.
- Grasp the beater bar at either end and lift straight up.
- Place one end of new belt over motor shaft and the other on the round pulley end of the beater bar. (Fig. 3)
- Align the rubber supports at the ends of the beater bar, with the slots in the motorized power head. Push into place. Ensure that the cut-outs on the rubber supports face upwards.
- Replace the two screws from the bottom of the motorized power head and then replace the cover. Then replace the two screws from the back side of the motorized power head.

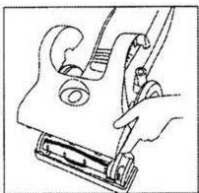 


Fig. 1

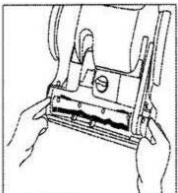 


Fig. 2

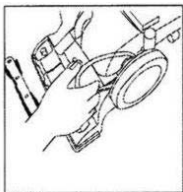 


Fig. 3

Changing the Head Light Bulb:

- Turn unit "Off" and unplug from wall outlet.
- Insert the edge of a flat edge screw driver into the locking tab on the headlight lens and pull the handle of the screw driver towards you. **Do NOT** push with the blade of the screw driver against the lens because it might cause it to break.
- Remove the lens. (Fig. 4)
- Remove the light bulbs by pulling them out carefully.
- Push the new light bulbs in and replace the lens cover.
- Make sure that it snaps in place.

Note: Always replace the light bulb with the same or smaller wattage size (12V 4W) to prevent damage to the surrounding parts.

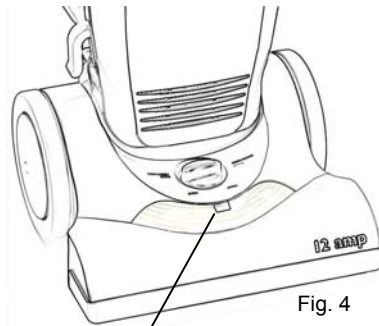 


Fig. 4

Lens locking tab



Warning: Always disconnect from power source when servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from cleaner suddenly starting.

Changing the Power Nozzle

Belt:

- Occasionally the power nozzle drive belt will require changing, the frequency will depend upon the amount of use your vacuum sees.
- Turn unit "Off" and unplug from wall outlet.
- Use a Phillips screwdriver and remove the two screws from the back of the motorized power head cover. (Fig. 1)
- Remove the two screws from the bottom of the motorized power head. (Fig. 2)
- If the belt has broken, remove any loose pieces before replacing.
- Grasp the beater bar at either end and lift straight up.
- Place one end of new belt over motor shaft and the other on the round pulley end of the beater bar. (Fig. 3)
- Align the rubber supports at the ends of the beater bar, with the slots in the motorized power head. Push into place. Ensure that the cut-outs on the rubber supports face upwards.
- Replace the two screws from the bottom of the motorized power head and then replace the cover. Then replace the two screws from the back side of the motorized power head.

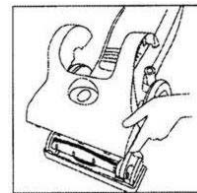 


Fig. 1

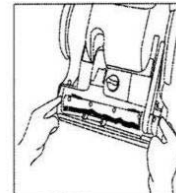 


Fig. 2

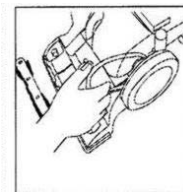 


Fig. 3

Changing the Head Light Bulb:

- Turn unit "Off" and unplug from wall outlet.
- Insert the edge of a flat edge screw driver into the locking tab on the headlight lens and pull the handle of the screw driver towards you. **Do NOT** push with the blade of the screw driver against the lens because it might cause it to break.
- Remove the lens. (Fig. 4)
- Remove the light bulbs by pulling them out carefully.
- Push the new light bulbs in and replace the lens cover.
- Make sure that it snaps in place.

Note: Always replace the light bulb with the same or smaller wattage size (12V 4W) to prevent damage to the surrounding parts.

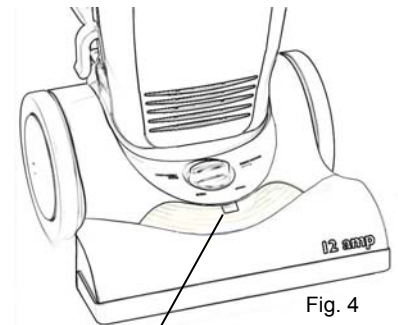 


Fig. 4

Lens locking tab